



Backing up to CD on Silverline JPEG2000 DVR's

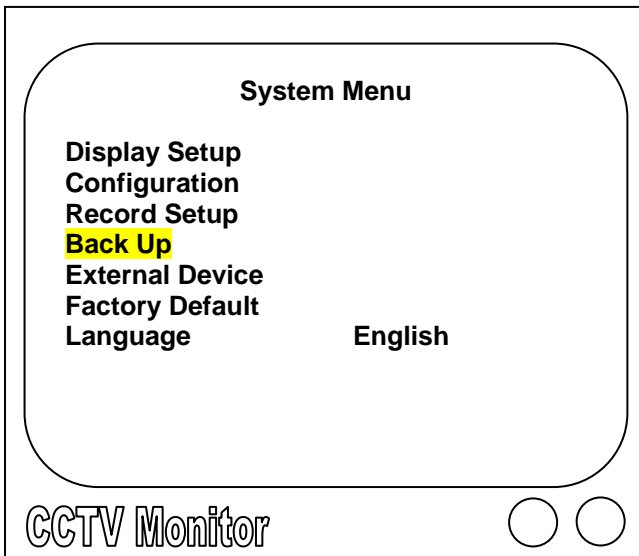


Enter the main menu by pressing the 'Menu' button on the front of the unit and inputting your password.

Use the down arrow to navigate to 'Back Up' and press 'Enter'.

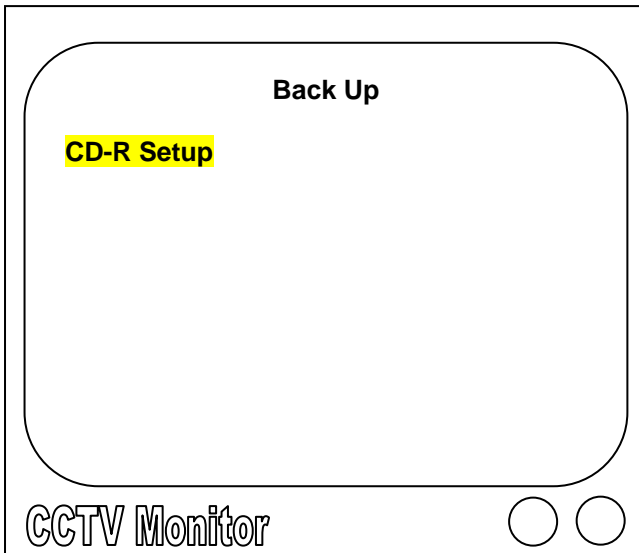

Press the 'Enter' button on the front of the DVR to enter the CD-R setup menu.

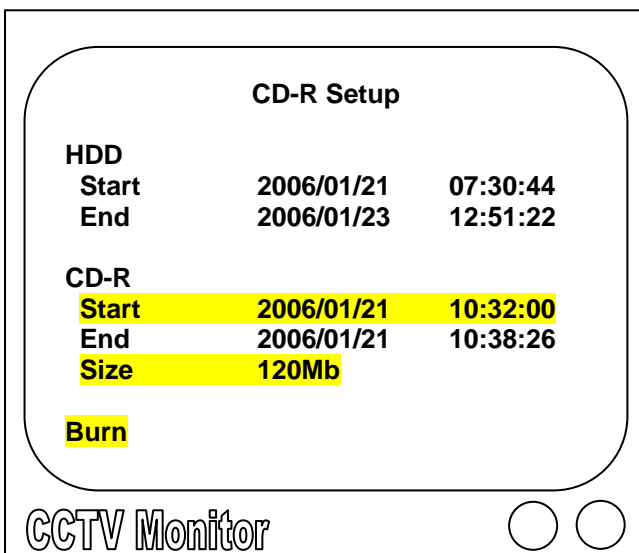

Use the + and - buttons and the left and right arrow buttons on the front of the unit to set the required start time of your back up then press 'Enter'. Press the down button to 'Size' and press 'Enter' to select how much of the CD to use using the + and - buttons (most CD's have a maximum capacity of 700Mb) this will automatically determine the end time of the back up. Once you have the required end time press 'Enter' and press the 'Down Arrow' to get to 'Burn'. Press 'Enter' and your CD will begin to write. Once the back up is complete the CD tray will open automatically. Play the footage back in the CD-R backup player (provided on the disc).