



Motion Detection Recording Setup on Silverline JPEG2000 DVR's

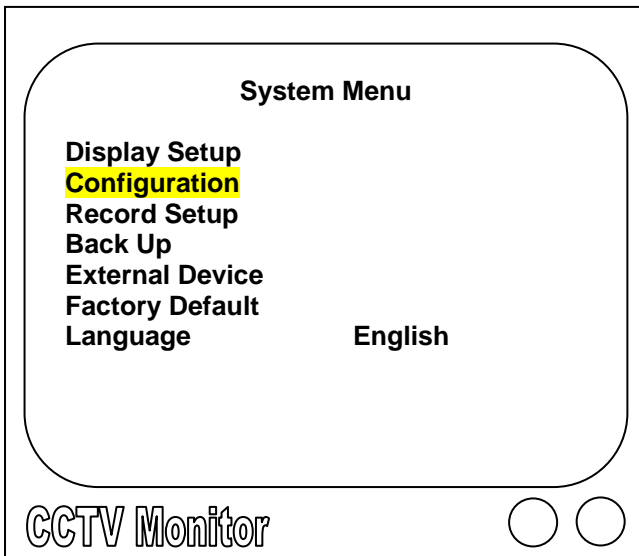


Enter the main menu by pressing the 'Menu' button on the front of the unit and inputting your password.


Use the down arrow to navigate to 'Configuration' and press 'Enter'.

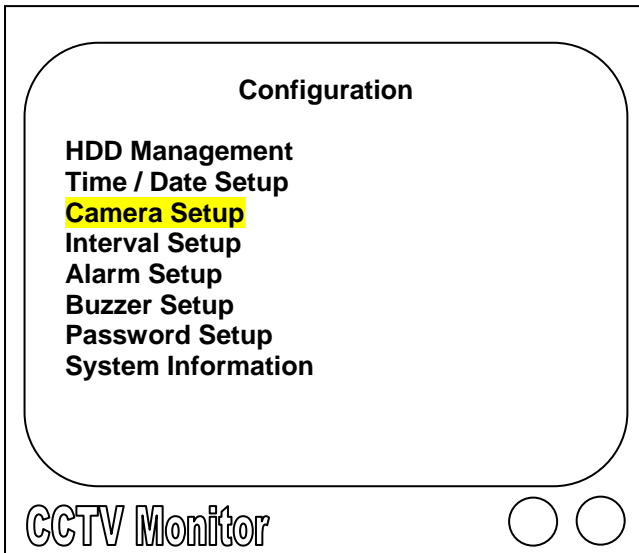


Use the down arrow to navigate to 'Camera Setup' and press 'Enter'

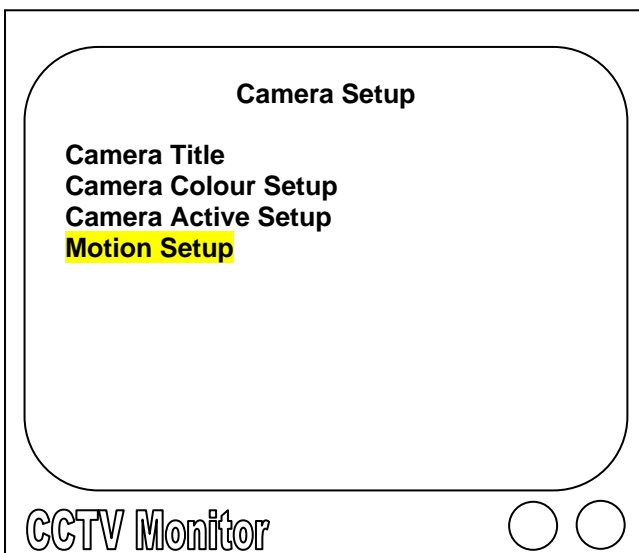


Use the down arrow to navigate to 'Motion Setup' and press 'Enter'

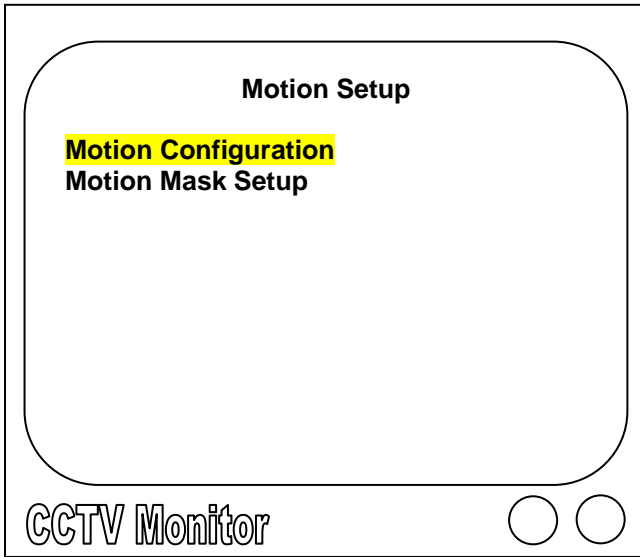

Press 'Enter' to get into the motion configuration menu

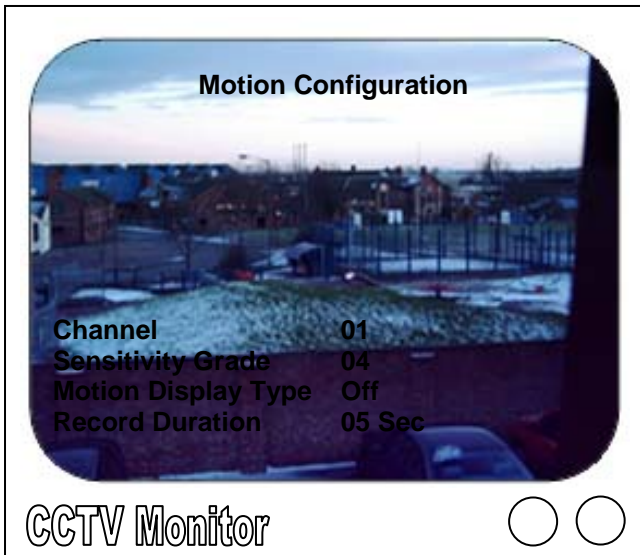


In this menu you can choose which camera you are setting up motion for, the sensitivity (specific to site, 01 being the lowest sensitivity, 04 being the highest), the motion display type (whether a visual aide is displayed on screen whenever motion is detected) and the record duration (how long after motion has been detected the recorder will continue to record for) by using the arrow buttons and the + and – buttons.

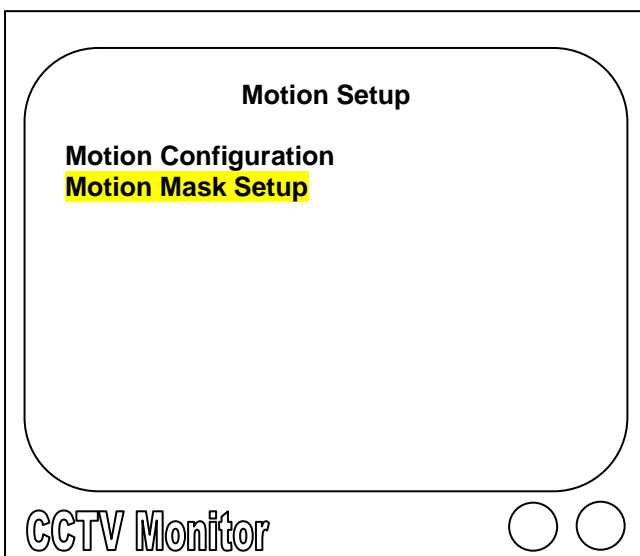


Press the 'Menu' button on the front of the unit to get back to this screen.

Press the 'Down' arrow button on the front of the unit to get to 'Motion Mask Setup' and press the 'Enter Button'

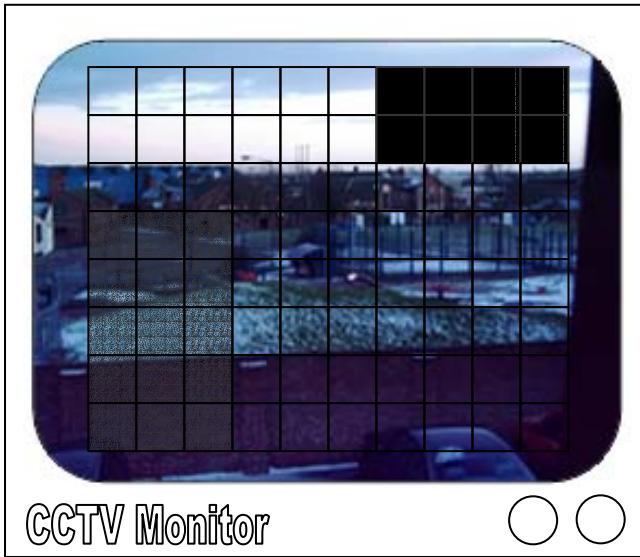


Whilst in the motion mask screen you can choose and area or areas of the screen not to be motion detected by masking them out. The shaded areas will not trigger the motion detection. Use the camera selection buttons on the front of the unit to choose a camera, use the arrow buttons on the front of the unit to choose a block, use the 'Mode' button to select whether to select one block, a line or the whole screen, use the 'Enter' button to mask or unmask the region and when you are finished, press the 'Menu' button to save your changes and exit.

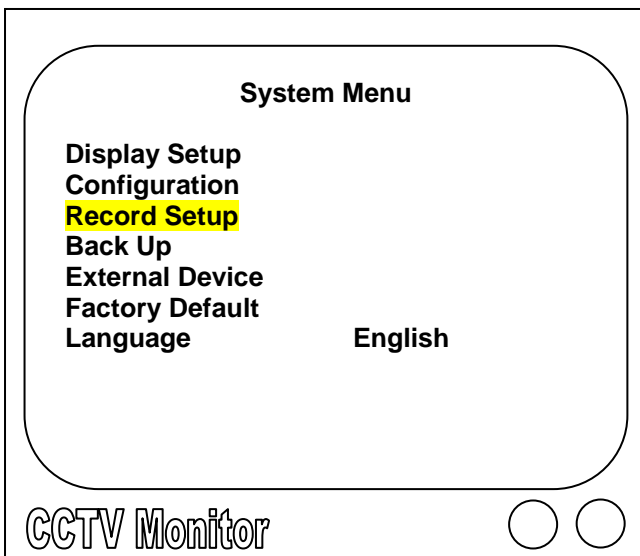


Press the 'Menu' button on the front of the DVR until you get to the 'System Setup' menu.

Use the down arrow on the front of the unit to navigate to 'Record Setup' and press the 'Enter' button

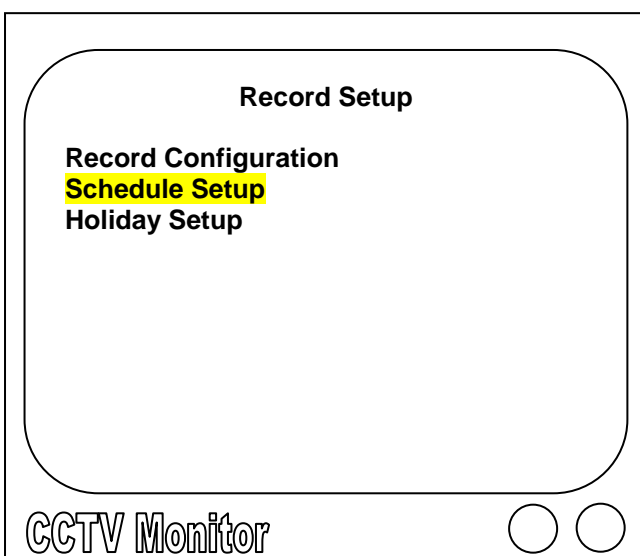

Use the down arrow on the front of the unit to navigate to 'Schedule Setup' and press the 'Enter' button

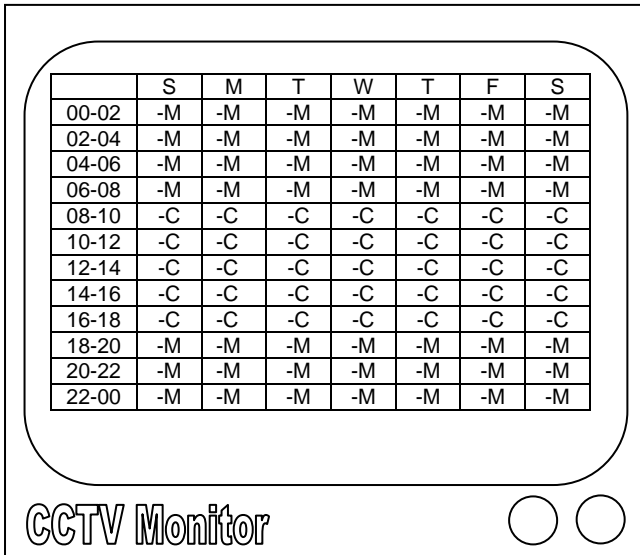

Set the schedule to record on motion when it is needed by using the + and – buttons and the arrow buttons. If motion detection recording is required all the time just change all the ‘-C’ to ‘-M’. When this is done press the ‘Menu’ button to save changes and exit this menu. The continually press the ‘Menu’ button until you are at live view.